



Detachable Bluetooth Speaker User Manual

INTO YOUR FUTURE


What's in the box

Speaker unit	Stereo cable	Manual

Main features and functions

Detachable Bluetooth speaker with subwoofer
Supports iPhone, iPad and any music devices with Bluetooth
Supports SD card and USB Driver playing
AUX function, supports MP3/PC/smartphones
Vol+/Vol-/Next/Prev/Play/Pause/Mode/Pairing buttons
Output: 7.5W*2+10W
Bluetooth 2.1+EDR
Supports A2DP, AVRCP
Frequency: 20HZ-20KHZ
Distance: >10 M
Power input: AC 120V-240V

Product diagram

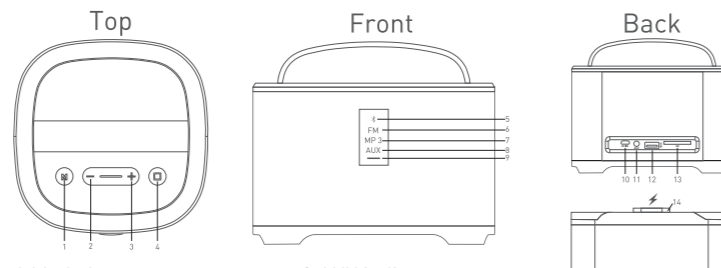

1. Mode button
2. Vol-/Prev button
3. Vol+/Next button
4. Power/Play/Pause button
5. Bluetooth indicator
6. FM Radio indicator
7. MP3/SD indicator

8. AUX indicator
9. LED charging indicator
10. Micro USB charging port
11. AUX-IN jack
12. USB port
13. SD card port
14. Connector/Charging dock

Operating instructions

Power ON /Off the speaker:

1. Connect the power cable to the power socket and press the power switch to the ON position. The subwoofer is powered on. Long press the power button on the master speaker to power on.
2. Press the power switch on the subwoofer to OFF position. The subwoofer is powered off. Long press the power button on the master speaker to power off.

Pairing your mobile Bluetooth device to the speaker:

Pairing instructions may differ depending on the device you are using. Please refer to your device's user manual for further information.

1. Pairing

- a. Make sure that your mobile device is within 1 meter of the speaker when trying to pair and that the speaker is powered on and in Bluetooth mode.
- b. If the speaker hasn't been connected to any mobile device, it will enter pairing mode automatically. If the speaker has been connected, press and hold the Mode button for 3 seconds until the speaker enters pairing mode. The LED icon will flash rapidly when the speaker enters pairing mode.
- c. Access the Bluetooth settings on your mobile device and select Search/Scan for devices. Your mobile device will begin to search for a Bluetooth signal.
- d. The name "Tellur Titan" will appear in the device list. Select it to pair.
- e. After a successful connection has been made, the LED icon will light up.

2. Reconnecting

- a. The speaker will automatically connect to the last Bluetooth device that was paired when powered on.
- b. If the speaker does not automatically reconnect, make sure that your mobile device is within 1 meter of the speaker, access the Bluetooth settings on your mobile device and select "Tellur Titan" from the device list. If the speaker is not listed, start from the beginning with the instructions from "1. Pairing" above.
- c. After a successful connection has been made, the LED icon will light up.

Playing music:

1. Make sure that your Bluetooth A2DP (audio/music) mobile device is paired with the speaker.
2. Begin playing music on your mobile device or simply press the Play/Pause button and you should hear the music playing through the speaker. If the music is low, increase the volume on the speaker first, then adjust your mobile device's volume.
3. You can control the playing directly from the speaker:
 - a. Next track - quick press the "+" button;
 - b. Previous track - quick press the "-" button;
 - c. Increase volume - long press the "+" button;
 - d. Decrease volume - long press the "-" button;
 - e. Play/Pause switch - quick press the Play/Pause button.

AUX function

1. Turn on the speaker (both subwoofer and master speaker).
2. Connect the speaker to a music player such as MP3/PC/mobile phone by AUX line.
3. The speaker will enter AUX mode and play the music from the player through AUX. If the speaker does not enter AUX mode automatically, press the M button to select the AUX mode.

USB driver and SD card playing

1. Turn on the speaker (both subwoofer and master speaker).
2. Put the USB driver into the USB port and the speaker will play the music from the USB driver. If the speaker does not enter USB/MP3 Mode automatically, press the M button to select the USB/MP3 mode.
3. Put the SD card into the SD slot and the speaker will play the music from the SD card. If the speaker does not enter SD/MP3 Mode automatically, press the M button to select the SD/MP3 mode.

FM radio function

1. Turn on the speaker (both subwoofer and master speaker).
2. Press the M button to select the FM mode, then choose the radio station by pressing the +/- buttons.

Note: Long press the M button to search FM channels automatically.

Charging the master speaker

Attach the small end of the Micro USB cable to the Micro USB charging port on the back of the master speaker and attach the larger end to your computer/USB adapter/charging device (5V). The charging LED indicator will turn RED while charging and GREEN when fully charged. Detach the Micro USB cable when finished.

The subwoofer can also charge the master speaker when the subwoofer is powered on, with the master speaker put on top.

Use the master speaker as portable wireless speaker

The master speaker can work without the subwoofer as a portable wireless speaker.

Note: The subwoofer has no function without the master speaker playing on top.

Read carefully and keep this manual

Caution: Any changes or modifications not expressly approved could turn the equipment inoperable.

If you have any questions or need help for this equipment, please contact the supplier or service center, do not intervene yourself.

Disposal and recycling information

The crossed-out wheeled-bin symbol on your product, battery, literature or packaging reminds you that all electronic products and batteries must be taken to separate waste collection points at the end of their working lives; they must not be disposed of in the normal waste stream with household garbage. It is the responsibility of the user to dispose of the equipment using a designated collection point or service for separate recycling of electrical and electronic equipment waste (WEEE) and batteries according to local laws. Proper collection and recycling of your equipment helps ensure EEE waste is recycled in a manner that conserves valuable materials and protects human health and the environment. Improper handling, accidental breakage, damage, and/or improper recycling at the end of its life may be harmful for health and environment.

Declaration of conformity

We, ABN SYSTEMS INTERNATIONAL S.R.L., Bucharest, Sector 1, Marinariilor street, nr. 31, we declare on own responsibility that the products below:

Product description	Brand	Product code
Portable speaker Tellur Titan, Subwoofer, 25W	Tellur	TLL161111

Does not endanger life, health, work safety, does not have a negative impact on the environment and corresponds to the standards stated in the manufacturer's declaration of conformity. The products are compliant with the following standards and / or other normative documents: **RED - 2014/53/EU**

Standarde aplicate:

- EN 60065: 2014-08
- EN 62479: 2010
- EN 301 489-01 V2.1.1: 2017-02
- EN 301 489-3 V2.1.1: 2017-03
- EN 301 489-17 V3.1.1: 2017-02
- EN 300 328 V2.1.1: 2016-11
- EN 303 345 V1.1.7: 2017-03

RoHS - 2011/65/EU
The product bears CE mark, applied in 2018

Name: George Barbu
Function: General manager

Place and date: Bucharest, 11-05-2018
Signed: