







# **Vox 155**

## **Bluetooth Headset**

### **TLL511451**

-  User manual
-  Manual de utilizare
-  Manual del usuario
-  Manuel d'utilisation
-  Manuale d'uso
-  Benutzerhandbuch




**INTO YOUR FUTURE**

## Thank you for choosing Tellur products!

To ensure an optimum performance and safety, please read this user manual carefully before using the product. Keep this user manual safe for future references.

## Product diagram

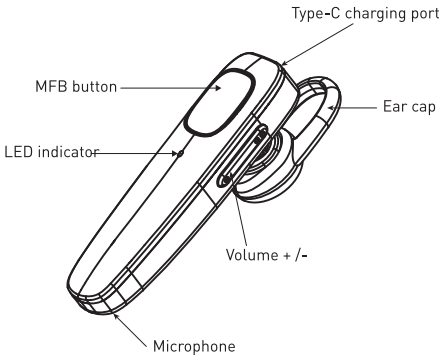

# Technical specifications

<b>Bluetooth version:</b>	v5.0
<b>Wireless range:</b>	Up to 10 m
<b>Frequency:</b>	2.4GHz, Class 2
<b>Supported profiles:</b>	A2DP, AVRCP, HFP
<b>Multipoint technology:</b>	Pair and maintain connections with two phones and answer calls from either phone
<b>Microphone frequency range:</b>	100HZ-10Khz
<b>Microphone sensitivity:</b>	-44dBm±2dB
<b>Speaker:</b>	∅10.45*5.5(H)mm
<b>Speaker sensitivity:</b>	113±3dB
<b>Frequency range of speakers:</b>	50HZ-10KHZ
<b>Talk time:</b>	Up to 9 hours
<b>Standby time:</b>	Up to 15 days
<b>Charging time:</b>	About 2 hours
<b>Charging connector:</b>	USB-C
<b>Features:</b>	Two microphones for noise cancellation, Battery level monitoring for iPhones, Call back last number*, Voice call (enable Siri/Google Assistant) *, Voice control (enable Siri/Google Assistant) * *Depends on the device
<b>Bluetooth pairing name:</b>	Tellur Vox 155
<b>Product dimensions:</b>	58.2 x 14.4 x 20.5mm
<b>Product weight:</b>	9g
<b>The package includes:</b>	1 x Vox 155 Bluetooth Headset 1 x USB-A to USB-C cable 1 x Hook ear grip 3 x Intra-ear adapters: S, M, L 1 x User's manual
<b>Dimensions of the package:</b>	145 x 96.5 x 30mm
<b>Warranty:</b>	2 years
<b>Operating temperature:</b>	0 °C +40 °C

# Operating instructions

## Charging

Before the first use, it is recommended to recharge the battery of the headphone completely.

Connect the Type-C cable to the Type-C charging port, the white LED indicator remains on for the entire duration of charging and turns off when the headset is fully charged.

- If the recharge does not turn on, disconnect, and reconnect the charger. A full charge cycle takes up to 2 hours. Unplug the headset and charger from the power supply source.
- When the battery level is low, an alert tone "Low battery, please charge" is played every 5 minutes, and the white LED indicator flashes 3 times every 20 seconds.
- If the battery level is less than 20% the user will hear a voice warning about the low battery and can continue to use the headset, still about 20min.

The fully recharged battery offers an autonomy of up to 9 hours of speech and up to 15 days in standby. The actual speech autonomy varies depending on phones, settings, usage, environment, and other variables.

## On/off

- Press and hold the MFB button for 3 seconds to turn on the headset, at which point the headset will issue a "start" voice warning, followed by another "pairing" voice warning.
- After the pairing state is initiated, the white LED light will continue to flash until the pairing is successful. If no connection is found, for 3 minutes, the headset will close automatically.
- When the headset is turned on, if you press and hold the MFB button for 5 seconds, then the headset will turn off, accompanied by a "power off" voice warning.

## Pairing

Turn on the Bluetooth function of the phone and look for the "Tellur Vox 155" headset to connect.

- Once the connection to the phone has been successfully made, a "connected" voice warning will be heard.
- The "disconnected" voice warning will be heard when Bluetooth is paused/interrupted, and the device enters the pairing state.

## Multipoint connection

The headset can connect to 2 phones at the same time.

- After pairing a phone with a headset, turn off the headset and Bluetooth connection of the connected phone and repeat the pairing process to connect a secondary phone.
- Turn the headset off and on again and restart the Bluetooth connection of the first phone to complete the pairing on both phones.

The headset automatically pairs with the latest paired phone(s) the next time you turn it on.

## Delete the pairing history

When the headset is charging, press and hold the MFB button for about 5 seconds until the white LED light flashes 3 times to erase the pairing records.

## Control music and calls

**Answer a call:** In the event of an incoming call, click on the MFB button once to receive the call, while a prompt electronic tone will be heard.

**End a call:** During a call, click the MFB button to end the call, while an electronic tone prompt will be heard.

**Reject a Call:** When there is a call received, press, and hold

the MFB button to reject the call, while an electronic tone prompt will be heard.

**Redial the last number:** In standby mode, click the MFB button to redial the last called number. One more click, again on MFB, will undo the redial.

**Volume Control:** During a call, briefly press Volume+ to increase the volume; briefly press Volume - to decrease the volume.

- Volume - : Click on "Volume" - "once, the volume will decrease by one level. A "beep" sound will be heard when reduced to a minimum.
- Volume +: Click on Volume "+" once, the volume will increase by one level. A "beep" sound will be heard when it reaches its maximum.

**Next Song:** Press and hold the Volume + button for 1 second.

**Previous Song:** Press and hold the Volume - button for 1 second.

**Play/pause music:** Press the MFB button to pause the music or repeat the same operation to play the music again.

### **Pending calls**

- End the current call and answer the incoming call on the secondary phone: press the Multifunction (MFB) button.
- Put the current call (channel A) on hold and answer the incoming call (channel B) on the secondary phone: press the Multifunction button twice. Double-click the MFB button again to switch to channel A. Repeat the operation to switch between the two channels of A/B. During a three-way call, click the MFB button once to close the current call and resume another call.

**Loss of connection:** When you exceed the allowed connection distance, you will hear a "disconnected" voice notification. The white LED indicator flashes quickly. The headset automatically enters the pairing state after about 3 minutes.

**Turn voice control on/off:** When your headphones play music/standby, press, and hold the MFB button to turn on the voice assistant and press the MFB button again to cancel the voice assistant. (To use this feature, your mobile phone should support voice control.)

### **Reset to factory configurations:**

- When charging the headset, long press MFB around 5 seconds, the white LED light will blink three times.

### **Safety information**

- This product contains a rechargeable Li-ion battery and cannot be replaced.
- To prevent the risk of hearing damage, do not listen at high levels of volume, for long periods of time.
- Don't try to detach the battery from the headset. Otherwise, the headset may be damaged. If you do not use it for a longer period, keep it in a dry and well-ventilated place and recharge it once every two months.
- Before using any charger to power the headset, make sure that the charger specifications meet the requirements of the headset.
- Keep your headset away from bank cards or other magnetic storage devices.

# Troubleshooting

Description of the problem	Cause	Solution
Power on function failed	<p>The battery has a low level.</p> <p>Pressing too short of the MFB button.</p>	<p>Recharge the battery.</p> <p>Press MFB longer(3 seconds).</p>
Charging function failed	<p>The charging cable is not connected correctly.</p>	<p>Disconnect and reconnect the charging cable.</p>
	<p>The charging cable is not appropriate.</p>	<p>The charger specifications must comply with the requirements of the headset.</p>
Power off function failed	<p>Pressing too short of the MFB button.</p>	<p>Press and hold the MFB button for 5 seconds.</p>
The headset could not be found or pairing failed	<p>Headphones does not enter into pairing mode.</p>	<p>Turn on the headphones to enter the pairing mode.</p>
	<p>Your phone's Bluetooth feature is not turned on.</p>	<p>Turn the phone off and on.</p>
	<p>The distance between the headset and the phone is outside the area of action (up to 10m).</p>	<p>Maintain the appropriate distance necessary to make the connection.</p>